BOSTONtec
Ergonomic Workstations

# Backscreen Assembly

## Part #s

BS2428
BS2428M
BS2428P
BS2428W
BSE2428 - ESD

*All backscreens mount the same*

| Tool List |
|---|
| #2 Phillips screwdriver |

| Item | Components | Qty |
|---|---|---|
| A | Backscreen assembly | 1 |
| B | Mounting brackets | 2 |
| C | #8-32 x 3/8" Phillips pan head thread cutting machine screw | 2 |

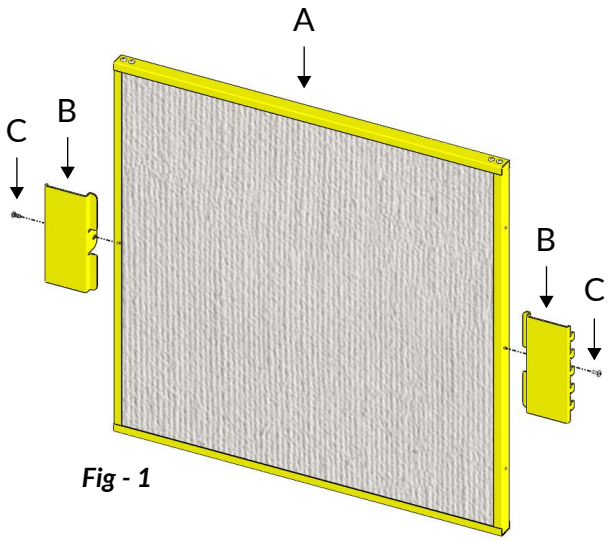


***Fig - 1***

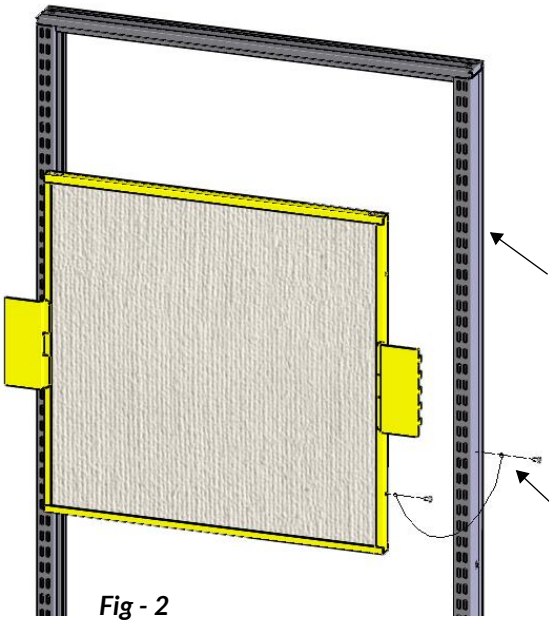


***Fig - 2***

**For ESD backscreens** grounding wire, screws and installation provided by the customer.

1. Attach mounting brackets (B) to backscreen assembly (A) using #8-32 x 3/8" phillips pan head thread cutting machine screws (C) (Fig - 1)

2. Insert mounting brackets (B) into slotted uprights at desired position. The backscreen can be mounted onto the uprights from the front or back (Fig - 2).

   For ESD applications, the ESD backscreen can be connected to the upright through a wire installed using self-tapping screws. *Wire and screws are not provided.*